

Sick Bike Parts.com

4 Stroke Air Filter Installation Instructions



Step 1


Remove your old air filter assembly and the breather tube from the engine. The breather tube is just pressed into the engine case and will require a little force to remove it.

Step 2

Insert the new breather tube into the engine case. Since the tube is new it had not been compressed yet so will be difficult to insert. You want to insert it about $\frac{1}{2}$ inch into the case. A little light oil on the tube will help.

Step 3

Install the adapter plate using the 2 long flat head bolts as show below.

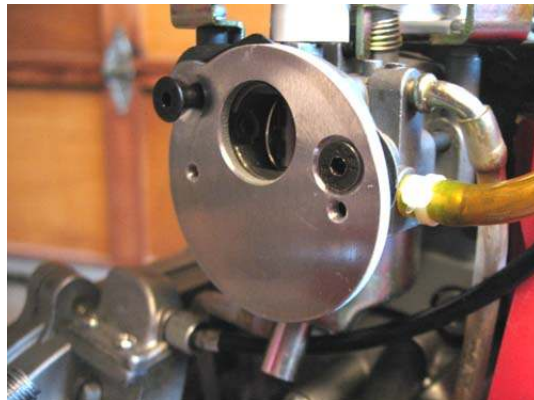

Step 4

Connect the breather tube to the nipple on the air filter.



Step 5

Connect the air filter to the adapter plate using the 2 supplied hex head bolts. Do not over tighten these or you will strip out the adapter plate. If you are concerned with these loosening it is a good idea to use thread locking compound.

